

BMW (X5) TRANSMISSION RUBBER MOUNT BUSH EXTRACTOR/ INSTALLER



*Step 1: Put accessory No. 1-3 into 1-2. Please refer to the removal illustration picture 1 for guidance.

Rating: Not Rated Yet

Price:

Sales price:

Discount:

[Ask a question about this product](#)

Manufacturer: [HCB Specialty Tools](#)

Description

Product Description :

BMW (X5) TRANSMISSION RUBBER MOUNT BUSH EXTRACTOR/ INSTALLER

?Product Info?

Model/Item No. :

H.C.B-A1201

Country of Origin :

Taiwan

Brand :

H.C.B

Product Specifications /Features :

1.The illustration removal:

*Step 1: Put accessory No. 1-3 into 1-2. Please refer to the removal illustration picture 1 for guidance.

*Step 2: Make sure clip the accessory No. 1-3 to the essence of the transmission, then put the accessory 1-1 into the outer breach of rubber mount to enable the central hole of accessory 1 and rubber mount to keep on a straight line. Then insert the accessory No. 5.

*Step 3: Install the bearing and nut on the both sides of accessory No. 5 after adjusting 1-4 and tightening 1-3.

*Step 4: To extract according to picture 2.

2.The illustration for install:


*Step 1: Insert the locking pin of accessory No. 4 into the of rubber mount. Please refer to the install illustration picture 1 for guidance.

*Step 2: To complete the installation according to picture 2.

3.Applicable:BMW (X5, 3000c.c.) before year 2003.

Primary Competitive Advantages :
Well and High Quality Control, Prompt Delivery, New Product, Customer'l's Design and Logo are Welcome, Competitive Prices
Sales Method :
Export, Manufacture
Payment Term :
T/T, L/C at Sight

on car :

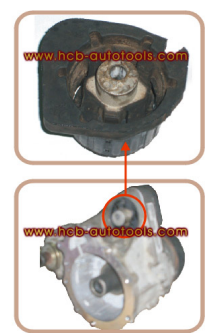

• The Illustration for Removal:

Picture 1

Picture 2

Step 1: Put accessory No. 1-3 into 1-2. Please refer to the removal illustration picture 1 for guidance.
Step 2: Make sure clip the accessory No. 1-3 to the essence of the transmission, then put the accessory 1-1 into the rubber smooth of rubber mount to enable the central hole of accessory 1 and rubber mount to keep on a straight line. Then insert the accessory No. 5.
Step 3: Install the bearing and nut on the both sides of accessory No. 5 after adjusting 1-4 and tightening 1-3.
Step 4: To extract according to picture 2.

• The Illustration for Install

Picture 1

Picture 2

Step 1: Insert the locking pin of accessory No. 4 into the inner hole of rubber mount. Please refer to the install illustration picture 1 for guidance.
Step 2: To complete the installation according to picture 2.

• Applicable: BMW (X5, 3000c.c.) before year 2003.